


FLEX-SHIELD

POLYCARBONATE TEMPERATURE SCAN STATIONS

Quick & Easy 4 Step Assembly!

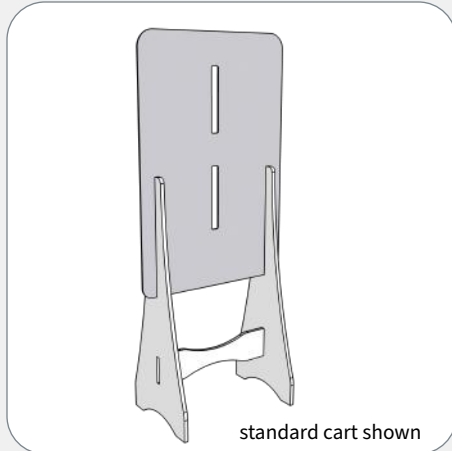

IMPORTANT: Remember to remove protective film from both sides of the polycarbonate surfaces before installation.

CONTENTS:


1x Scan Shield



1x Base Cross Member w/ mounting hardware




2x Base Legs

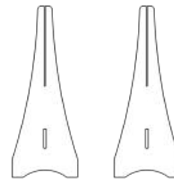


STEP 1

Align the Base Cross Member to the side of the Base Leg at the designated slot. Install (2) of the provided screws into the holes and tighten to secure. Repeat process for opposite side.

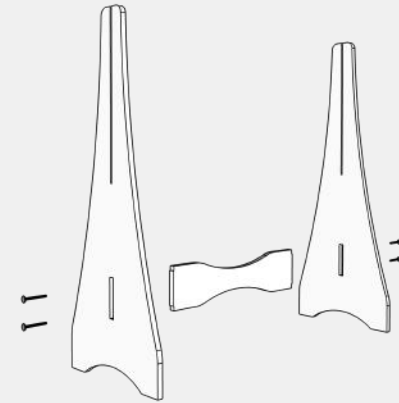


STEP 2

After Removing Protective Film, wipe surfaces clean with a polycarbonate compatible cleaner before installing onto the base.

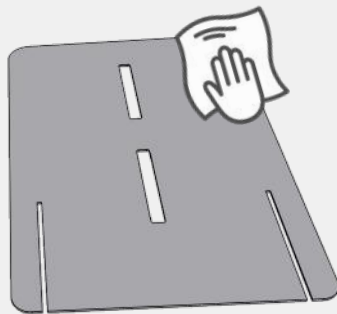


STEP 3

After cleaning the scan shield, slide the shield onto the previously assembled base.

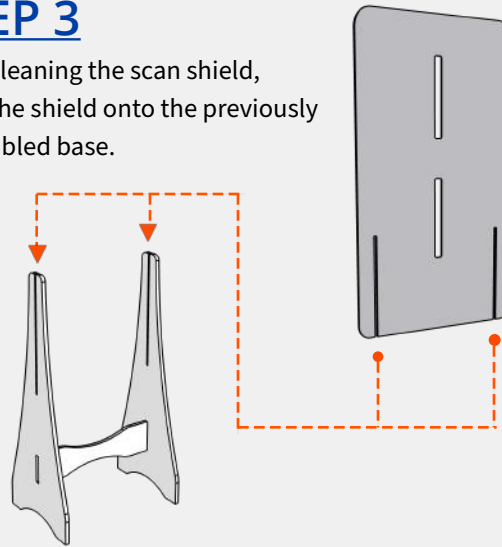

STEP 4

Place FLEX-SHIELD Temperature Scan Station at any entrance, or desired location.

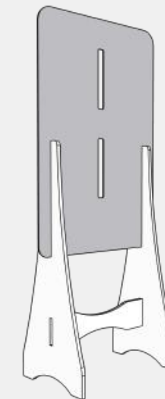

ASSEMBLY IS COMPLETE!